


LIGHTING DECISION GUIDE

NORTHWEST
LIGHTING NETWORK

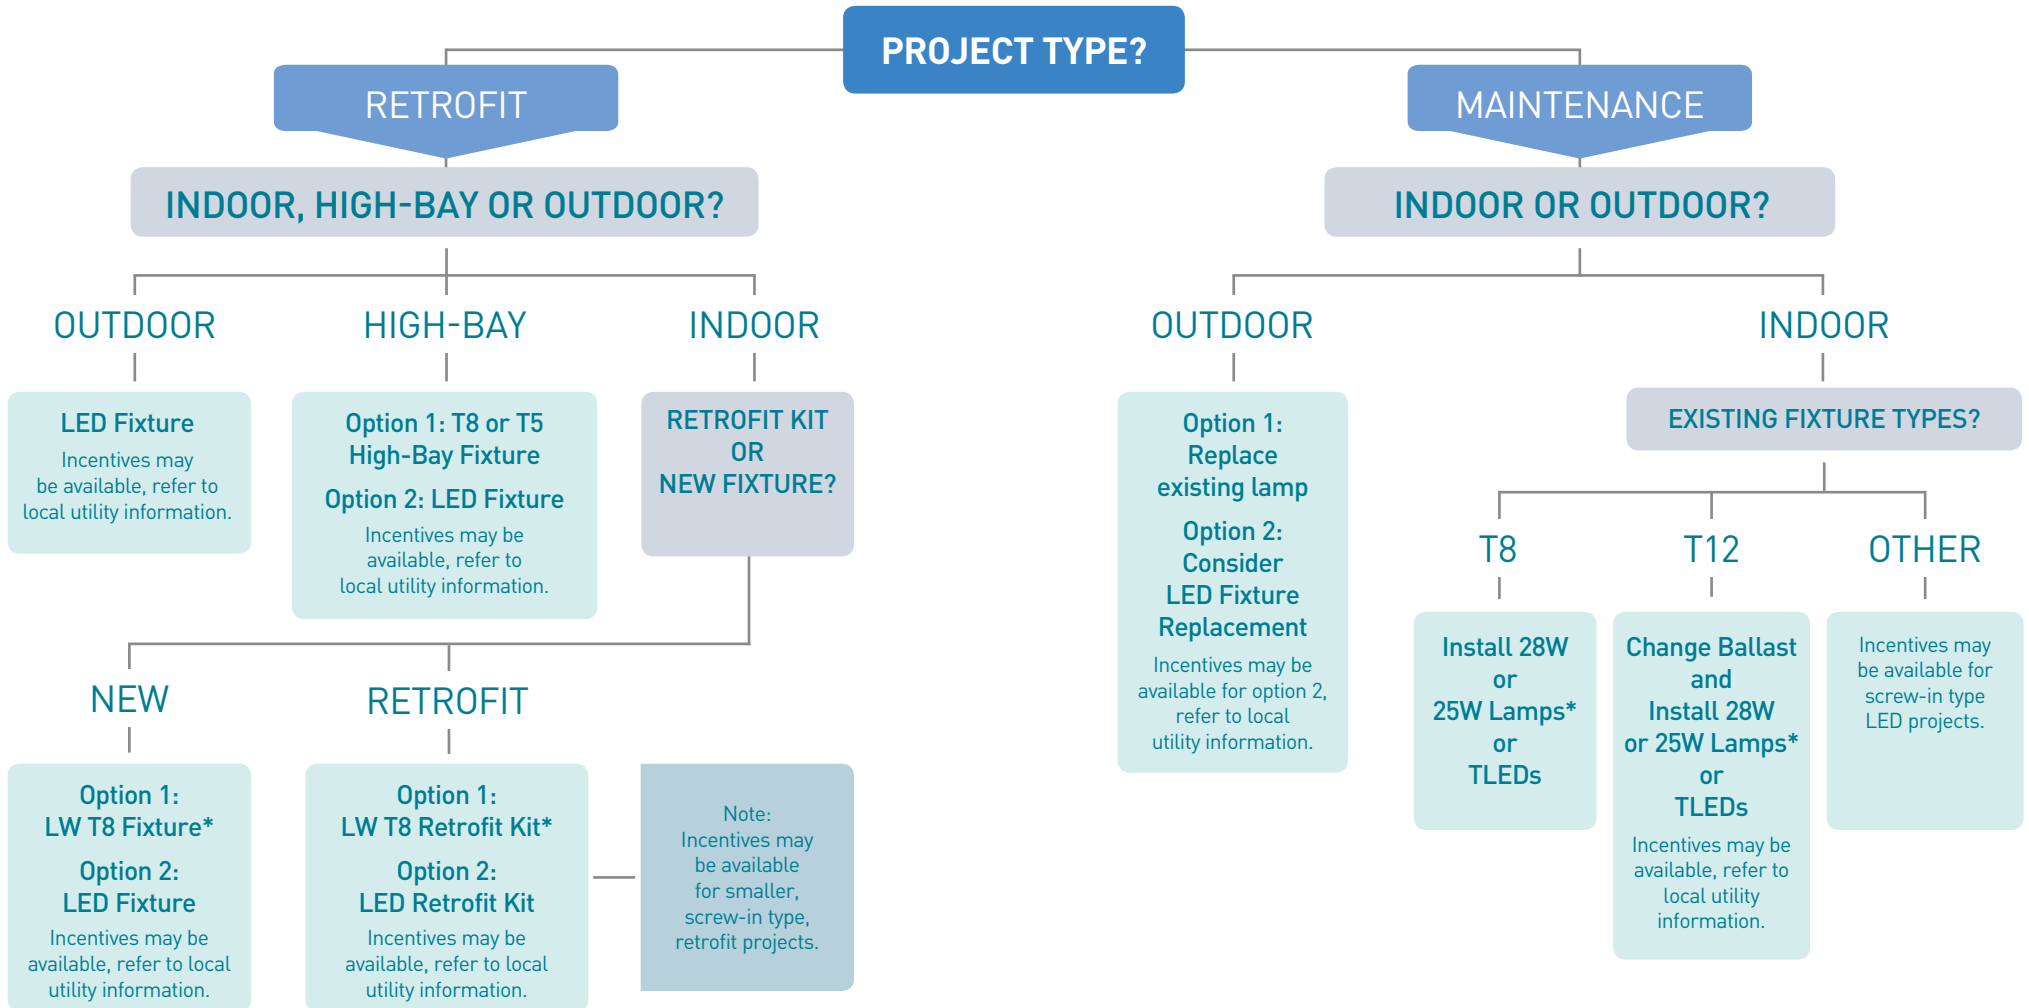

*Ambient space temperatures should be around 70°F to gain full performance of low wattage fluorescent lamps.

FOR GENERAL QUESTIONS CONTACT: INSERT UTILITY CONTACT INFORMATION